



# VVO A2


# Module with 2 analog outputs

Datasheet

# **Description**

Module with 4 digital analog outputs. Main characteristics:

- 2 analog outputs  $0 \div 10V$  or  $\pm 10 V$
- 12 bit resolution
- Load range (voltage outputs):  $1 \text{ k}\Omega$  to  $\infty$
- Status and diagnostic LEDs

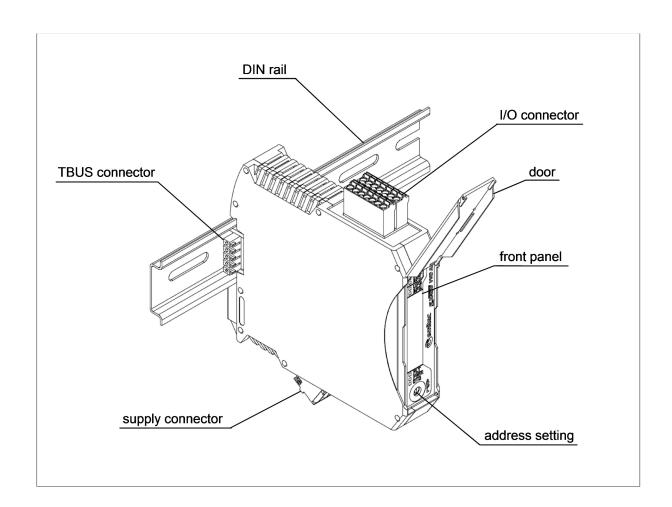



# **Ordering informations**

Products	SMITEC part number
Module with 2 analog outputs, complete with accessories (power connector, outputs connector and	KZ010217
TBUS connector)	

Accessories	SMITEC part number
Power supply connector (Phoenix Contact p/n 1910377)	KF100009
I/O connector (Phoenix Contact p/n 1738856)	KF101049
TBUS connector (Phoenix Contact p/n 2713722)	KF101034
Power supply fuse (Littelfuse p/n 0452 002)	KD201035

Documentation	SMITEC part number
Installing instructions	DK400042
Datasheet for VVO A2	DK400071
FLXIO and FLXMOD system integration manual	DK400076



# **Technical data**

General data	
Housing dimensions (width x height x depth)	22.5 mm x 99.0 mm x 114.5 mm
Weight	99 g (without connectors), 119 g (with connectors)
Connection method for connectors	Spring cage terminals
Conductor cross-section (power connector)	0.2 to 2.5 mm <sup>2</sup> (24 – 12 AWG)
Conductor cross-section (output connector)	0.2 to 1.5 mm <sup>2</sup> (24 – 16 AWG)
Functional earth connection	To the DIN rail by spring contact
Mode state visual indicators	Fault (FLT) and status (STS) LED lamps

Environment data	
Permissible operating temperature	+5° to +55°C
Permissible storage and transport temperature	-25° to +85°C
Permissible humidity	10% to 95%, not condensing
Permissible air pressure (operation)	80 to 106 kPa (up to 2000 m above sea level)
Permissible air pressure (storage and transport)	70 to 106 kPa (up to 3000 m above sea level)
Degree of protection (CE)	IP20 according to IEC 60529
Degree of protection (UL)	Open Type
Overvoltage category	II
Pollution degree	2
Means of protection (UL)	Class III SELV power supply

Power supply		
Main power supply V <sub>m</sub>	24 V DC == (-15% ÷ + 20% according to IEC 61131-2)	
Maximum allowed ripple	5% of supply voltage (according to IEC 61131-2)	
Current consumption from main supply	1.5 A max. (for external loads supply)	
Supply overvoltage protection	Bidirectional Zener clamp (V <sub>z</sub> > 30 V)	
Supply reverse polarity protection	Protection diode, and safety fuse	
Supply fuse	2 A, not replaceable by the user	
Local bus power supply	5 V DC (from local bus)	
Local bus supply protections	None	
Power presence visual indicators	Green LED lamp, lighted if main supply is present (PWR)	
Power load from local bus at 5V DC	Approx. 0,25W	
Power load from local bus at 24V DC	Approx. 0,65W + 0,1W for each output at full load	
Total power dissipation	Approx. 0,9W + 0,1W for each output at full load	
Max. current on V <sub>S</sub> pin	1.5 A max.	



Analog outputs			
Number of outputs	2		
Voltage output range (unidirectional outputs)	0÷10 V		
Voltage output range (bidirectional outputs)	-10V ÷ +10V		
Digital resolution	12 bit		
Output permissible load	1 kΩ to ∞		
Unidirectional outputs total error at 25°C	±0.5% of full scale range		
Unidirectional outputs temperature drift	<0.01%/°C (referred to full scale range)		
Bidirectional outputs total error at 25°C	±1.0% of full scale range		
Bidirectional outputs temperature drift	<0.02%/°C (referred to full scale range)		
Outputs common potential isolation from GND	500 VAC, functional		
Isolation between channels	none		
Output state visual indicators	Two orange LED lamps for every input, lighted when output 0-10V (UPx) or output ±10V (BPx) is active		

Interface		
Local bus	Proprietary FLXIO <sup>TM</sup>	
Module address setting	By rotary switch on front panel	
Bus connections	By TBUS connectors on DIN rail	
Interface circuitry protections	ESD protections	
Level of ESD protection	±8 kV (IEC 61000-4-2, contact discharge)	



### **Connections**

The module has two connectors: a power connector and an output connector. They allow easy "plug and play" of the module, and also a fast replacement of a faulty unit.



**Warning**: Use a cable with cross-section suited to the current involved. A wire smaller than necessary could cause risk of fire and unwanted voltage drops.



**Warning**: To ensure conformance with EMC directive 2014/30/UE, the length of the cables must not exceed 30 m!




**Warning**: If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired

#### **Power connector**

The power connector is located on the bottom wall of the module. For the pinout, refer to the illustration.

Its function is to provide the supply for the I/O circuitry, whilst the CPU of the module is fed by the TBUS connector on the back of the unit.

Refer to the FLXIO and FLXMOD System Integration Manual for power connections topology.

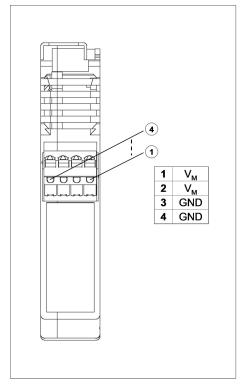



For connector ratings and the applicable wiring refer to the following table

Connector type: Phoenix Contact FKC 2,5/ 4-ST (1910377) Order code: KF100009			
Technical data		Conductor cross section	
Nominal voltage (CE)	250V	Solid (CE)	0,2÷2,5mm²
Nominal voltage (UL)	300V	Solid (UL)	26÷12AWG - 75°C
Nominal current (CE)	12A	Flexible (CE)	0,2÷2,5mm²
Nominal current (UL)	10A	Flexible (UL)	26÷12AWG - 75°C
		Flexible, with ferrule without plastic sleeve	0,25÷2,5mm²
Stripping length	10mm	Flexible, with ferrule with plastic sleeve	0,25÷2,5mm²
Screwdriver to open contacts	0,6 x	2 flexible conductors with same cross section, stranded TWIN ferrules with plastic sleeve	0,5÷1,5mm²




Warning: Pay attention to NOT supply the module with reverse polarity. This is to not blow internal fuse and/or damage the connected devices and/or burn the module itself.



## **Output connector**

Located on the upper side of the module, this connector (see illustration) permits the wiring of the output signals.

As you can see from the illustration, each row of the connector has the same pinout, to ease the wiring and prevent mistakes.

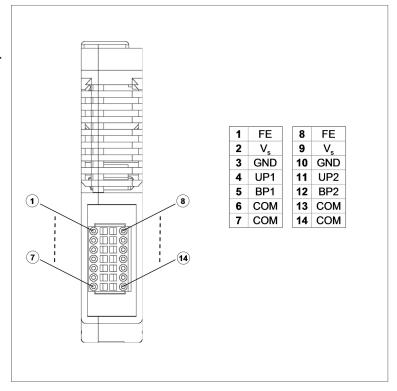

For connector ratings and the applicable wiring refer to the following table

Connector type: Phoenix Contact FMCD 1,5/7-ST-3,5 (1738856) Order code: KF101049				
Technical data		Conductor cross sect	Conductor cross section	
Nominal voltage (CE)	160V	Solid (CE)	0,2÷1,5mm²	
Nominal voltage (UL)	150V	Solid (UL)	24÷16AWG - 75°C	
Nominal current (CE)	8A	Flexible (CE)	0,2÷1,5mm²	
Nominal current (UL)	8A	Flexible (UL)	24÷16AWG - 75°C	
Stripping length	10mm	Flexible, with ferrule without plastic sleeve	0,25÷1,5mm²	
Screwdriver to open contacts	0,4 x 2,5mm	Flexible, with ferrule with plastic sleeve	0,25÷0,75mm²	



#### **Connection notes**

The connection scheme differs slightly, depending on the actuator's technology. More precisely, you have to use a different wiring for 4-wire, 3-wire and 2-wire actuators. In the figure on the next page, you'll find the recommended wiring for these actuators. If the system should work in a noisy environment, the use of shielded wire is mandatory; the shield must be connected to the FE pin of the connector.



**Warning**: If the supply for an actuator is drawn from the output connector, be careful not to exceed the maximum current, or the internal fuse will blow. Refer to the module characteristics for fuse ratings.




**Warning**: If the actuator is fed by an external power supply unit, never exceed the isolation voltage quoted on module characteristics, or system failure will occur!




**Warning**: Supplying an actuator with an external power supply unit, be aware of signal degradation risk due to quickly varying common mode potentials. Whenever possible, the ground of the external power supply should be equipotential with the ground of the main power supply.



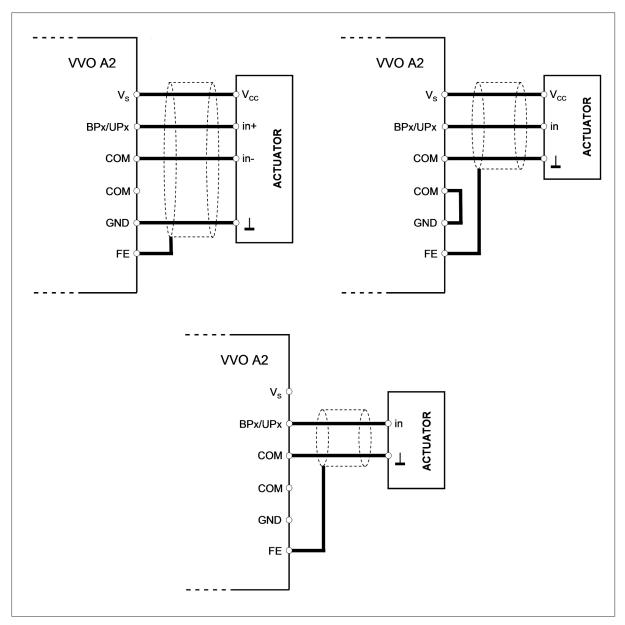

Recommended connection for actuators, using a 4-wire (above, on the left), 3-wire (above, on the right) and 2-wire (below) technique.

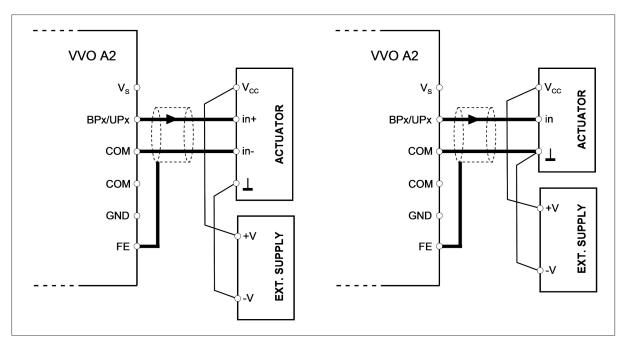

Recommended wiring for externally-fed actuators, having a differential (left) and single-ended (right) signal input.



## **Module addressing**

Before operation you must set the address of the module by the rotary switch reachable from the front panel; the operation is easily done opening the transparent plastic cover and turning the rotor with a small bladed screwdriver.

The address determination is described in the FLXIO and FLXMOD System Integration Manual.


### Diagnostic and status indicators

Each module is provided with a series of LED lamps on the front panel (see illustration), that indicates the status of the unit, the setting of every output (voltage or current) and a possible diagnostic warning. For the sake of clarity, different lamp colours are employed.

The green power (**PWR**) LED is lighted if the 24 V supply  $(V_M)$  is present and the internal fuse is not blown.

Self monitoring of supply voltage is also implemented to deliver a best self-diagnosis. The module switches in diagnostic error when  $V_{\rm M} > 30 {\rm Vdc}$  and when  $V_{\rm M} <$  of the value set up by the master module (low voltage check is disabled by default); this status is displayed by STS LED.

The **UP1** and **BP1** LEDs indicate that the output #1 is used as an unidirectional  $(0 \div 10V)$  or bidirectional  $(-10V \div +10V)$  voltage generator; their colour is orange. The **UP2** and **BP2** LEDs have the same function, regarding the output #2.

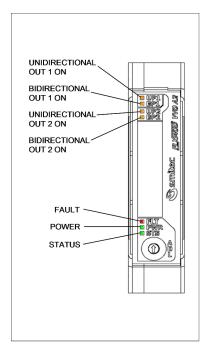

The status of the unit is indicated by both status (STS) and fault (FLT) LEDs; their behaviour is described in the following logic state chart. The exact cause of a diagnostic error can be read out by master module and the application software.



